



---

## SPOKE NIPPLE DIMENSIONING

- G = Thread
- D = Shaft diameter (not width across flats)
- L = Total length